


manual

Stand alone movie digitizer Moviesaver 1000

EN

Item: 97100

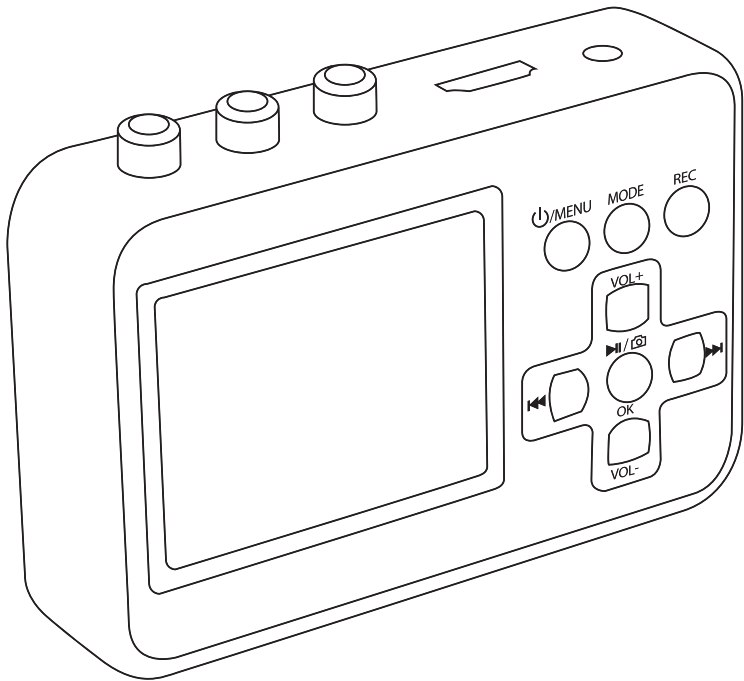

Package content

1.



2.



3.



4.



5.




1. Video grabber
2. USB power adapter
3. RCA cable
4. AV cable
5. USB cable


Charging the battery

The battery can be charged in two ways:

A Via the power mains

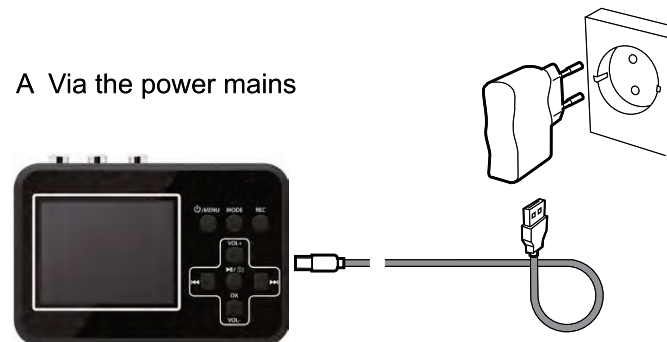

B Via a computer's USB port

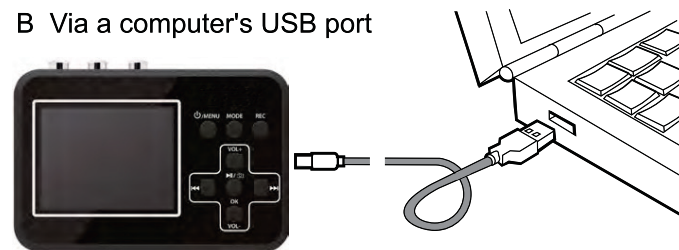

Charge the video grabber fully before using it for the first time.
A full charge takes 5 hours.


Installing a memory card

A memory card must be used.
For optimal results, a memory card with speed class 10 is recommended.






In order to remove the memory card, gently press inward and then carefully remove the card.

Connections

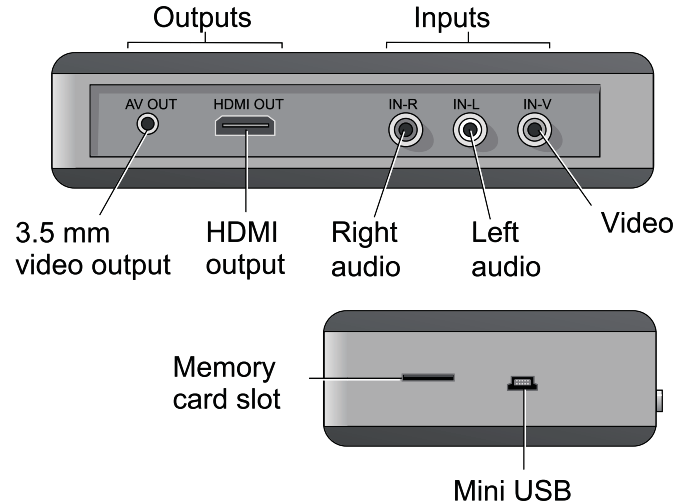


Connecting the video grabber

Connect the video grabber to the video source and monitor in the following ways:

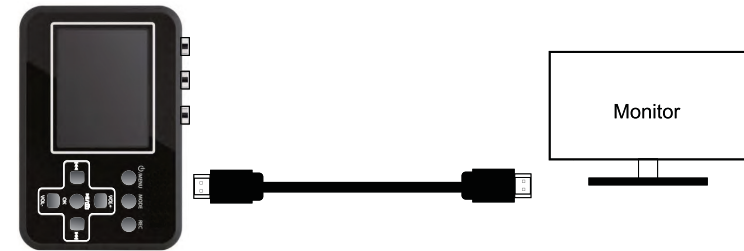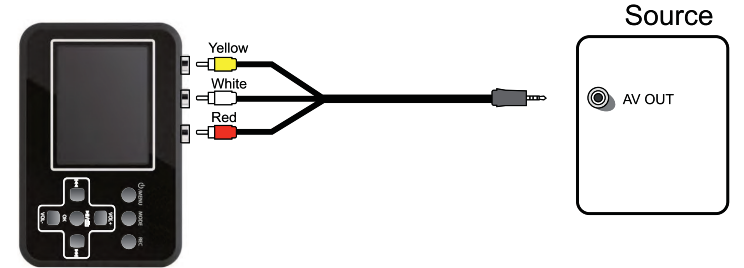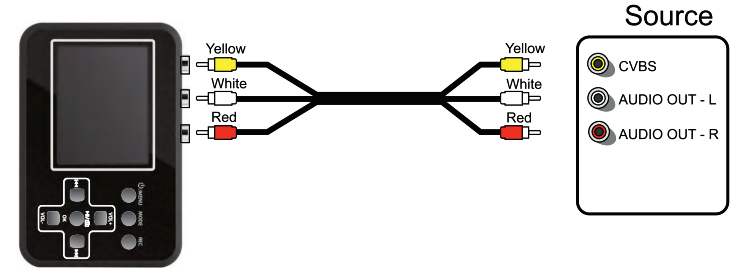


Other cables and adapters may also be used (not incl.)


Operation

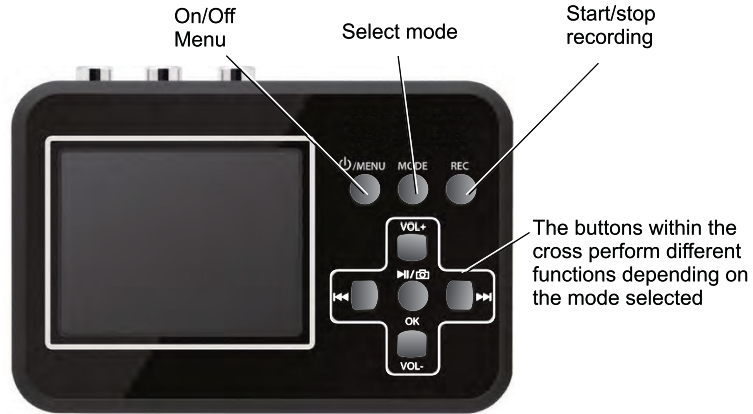

Play mode:

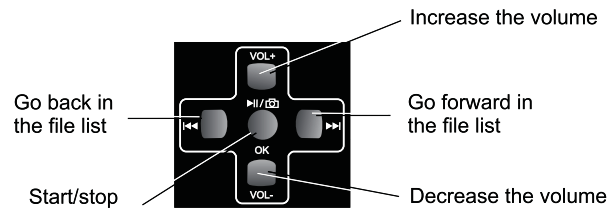

Video recording mode:

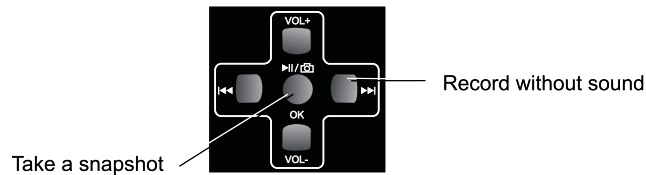


Starting the video grabber

Make sure that the battery is charged and that the memory card is in place. Press the On/Off Menu button for approximately three seconds.



Upon being powered up, the video grabber starts in video recording mode and the following information is shown on the display:

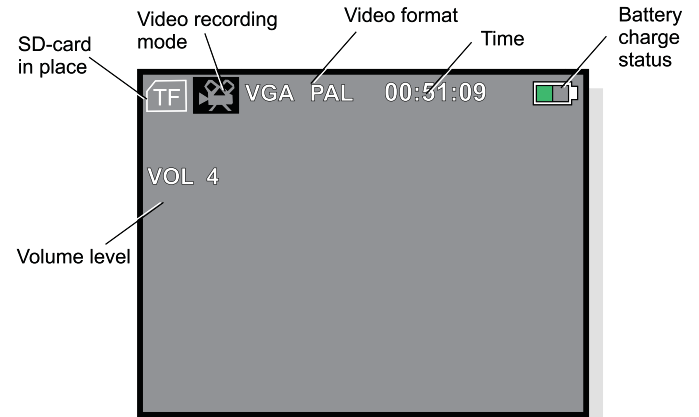


N.B.! If no memory card is in place, the message **No Card** appears on the display.

Settings


Press the **On/Off** Menu button once to go to the settings.



Press **OK** to gain access to the underlying menu.

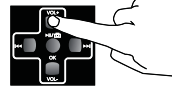

Scroll between the various menu alternatives by using the **VOL+** and **VOL-** buttons.

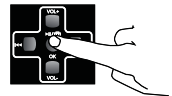

Press **OK** to save the selected alternative.



Press the **On/Off** Menu button to leave the settings mode.

Settings

The available settings are:

Size: VGA (640x480 pixels) QVGA (320x240 pixels)

Time stamp: The recording can be marked

Auto off: Off, 15, 30 or 45 min.

Language: English, French, German etc.

Date input: Set the time and date

Sound: Sound on or off

Version: Version number

Recording

1. Connect the video grabber to the video source.
2. Turn on the video source.
3. Turn on the video grabber
4. Press the **REC** button to begin recording.

The counter in the top right-hand corner of the screen turns red.



5. Press PLAY on the video source to begin playing your video. The film is now also visible on the screen on the video grabber. While your film is being recorded, you can do the following:

- a. Record the film without sound.



Press the ►► button. Press it once more and the sound is once again recorded.

- b. Take snapshots



Press the button. The snapshot is automatically given a serial number as its file name.

6. Press the **REC** button to stop and save the recording.

Settings in play mode

Press the **MODE** button to select the play mode.




The video grabber is now in play mode.



Press the **On/Off Menu** button to go to the settings.

Play	
Delete	Enter
Protect	Enter
Format	Enter
Slide Show	3 Sec.
Volume	4
Version	BR120v01
1 / 1	(M) Exit (OK) Set

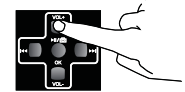

Scroll between the various menu alternatives by using the **VOL+** and **VOL-** buttons.

Press **OK** to gain access to the underlying menu.



The following settings can be made in play mode:

Delete: Remove the current film or snapshot.

Protect: Prevents the films from being deleted. You can select single films, all of them or select from the miniatures that are displayed. Protected files are indicated with a padlock.



Format: Formats the memory card and deletes all the files, even those that are protected.

TV output: PAL or NTSC

Slide show: Presents the snapshots in the form of a slide show.

Volume: Sets the volume level

Version: Version number

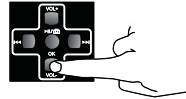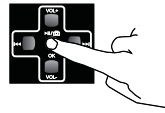

Using the **VOL-** button, scroll down to your desired alternative. Please note that the blue field is now highlighted.




Press **OK** to save the settings and return to the settings menu.

Playback


1. Turn on the video grabber
2. Use the **MODE** button to select the play mode.
The video grabber is now in play mode.



3. Select the desired film using the **▶▶** or **◀◀** button.
4. Press **OK** to play the film.

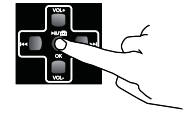


You can zoom in and out on snapshots in several steps by pressing the **OK** or **VOL+** button.

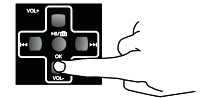

Pressing the **VOL-** button will zoom back and finally data about the image file is shown.

Showing recordings on TV

You can connect the video grabber to a TV via the AV cable or by using an HDMI cable.

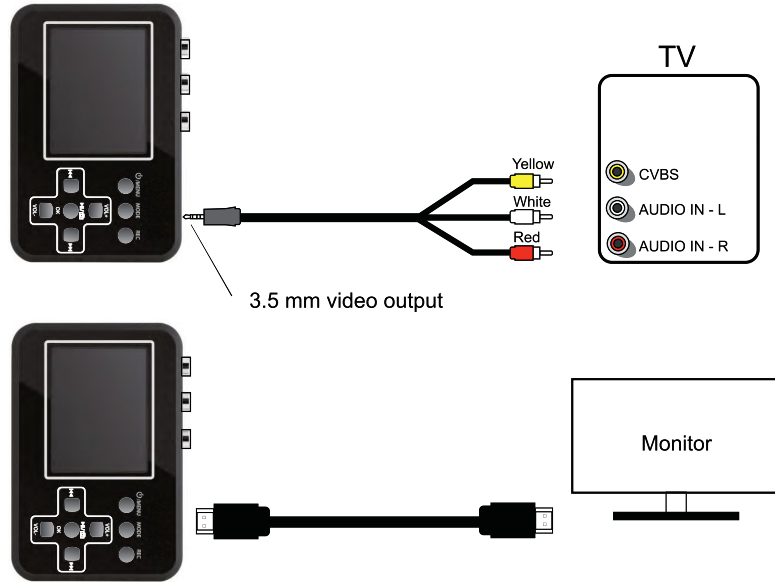

If you want to connect to the HDMI on your TV, use an HDMI cable (not incl.)


The video grabber's screen turns black and you will see the film on the TV screen instead.

Copying to a computer

By connecting the video grabber to a computer, you can process your recorded films and images on the computer itself. A driver will automatically be installed onto your computer the first time you connect the device to your computer. The video grabber then appears as a removable disc drive on the computer, so you can copy and rename, or delete your films.

How to copy your recordings onto your computer:

1. Start the computer.
2. Connect the video grabber to the computer by using the USB cable.

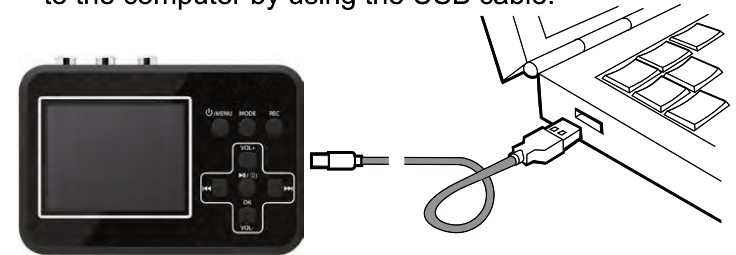

3. The video grabber now appears as a removable disc drive on the computer.

N.B.! Do not playback video material while the video grabber is connected to the computer. This may damage both the computer and the video grabber.

Troubleshooting

1. Before pressing the REC button of the product, please make sure the input sources (DV, DVD player, VHS) is turned on and can provide audio or video signal to the product.
2. Make sure that the A/V cables are securely connected to both the input sources and the device.
3. If the product crashes, please use a needle to push the hole at the back of the product to reset it.
4. Please use a memory card with speed class 10 or above.
5. If the screen remains black in spite you having pressed the On/Off Menu button for several seconds, the battery may be dead. Connect the charger and try again.

Screen symbols



Memory card



Video recording mode



Film



Play mode



Available button alternatives



Exit

Press the **On/Off Menu** button to leave the setting mode



Set

Press **OK** to save your selected setting



Battery-charge indicator