

manual

Wake up light


Item: 33013

EN

SV



Rubicson®

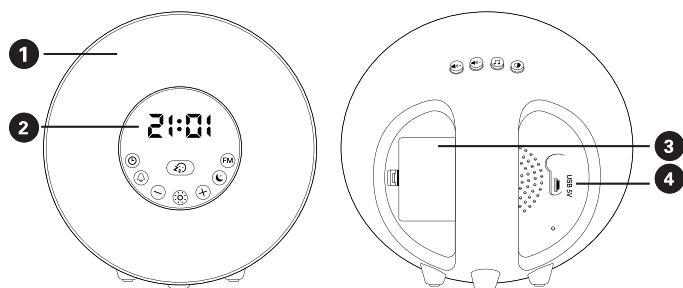

- | | | |
|--------------------|-----------------|------------------------|
| 1. LED light | 7. Alarm | 12. FM radio |
| 2. Display | 8. Minus | 13. Volume + |
| 3. Battery holder | 9. Brightness | 14. Volume - |
| 4. Power connector | 10. Plus | 15. Sound |
| 5. Snooze | 11. Sunset mode | 16. Display brightness |
| 6. Time | | |

Specifications

Power:	230 V, 50/60 Hz
Battery:	3x AAA (not incl.)
Light color:	Warm white & RGB
Dimension:	Ø170 x 110 mm
Weight:	290 g
Functions:	Wake-up-light, FM radio, Snooze

Included

- Wake up light
- Power adapter (Micro USB)
- Manual

Use

Connect to power

Connect the included power adapter to the power connector (4). Always grab the power adapter by the plug when disconnecting it, do not unplug it by pulling the cord.

Install batteries

To install batteries, pull the latch and open the battery lid. Place three AAA batteries in the battery holder (mind the polarity) and close the lid. If the wake up light is powered by batteries the light functions does not work, only alarm and radio.

Set the time

Set 12- or 24 hour format by pressing the [Time] button (6). Press and hold the [Time] (6) button once to set the hours and then press the [Time] button (6) once again to set the minutes. Use the [Minus] (8) and [Plus] (10) buttons to set the time.

Display

Press the [Display brightness] (16) button to choose one of the following options; display off, half brightness and full brightness.

If powered by batteries, the display will automatically turn off after 10 seconds, press any buttons (13-16) to turn it on again.

LED light

The LED light have three options, warm white, colors, and off. Press the [Brightness] (9) button to choose between these.

For the warm white option, use the [Minus] (8) and [Plus] (10) buttons to increase or decrease the brightness.

For the color option, use the [Minus] (8) and [Plus] (10) buttons to switch between the different colors. If no buttons are pressed, the light will softly fade between all colors.

Alarm sound

Choose desired alarm sound by pressing the [Sound] **(15)** button. Switch between the sounds with the [Minus] **(8)** and [Plus] **(10)** buttons. Sound 1 to 6 are different sounds and songs, number 7 is the latest played radio channel. Press the [Sound] **(15)** button again to confirm the selected alarm sound.

Setting the alarm

Press the [Alarm] button **(7)** to turn on the alarm (the alarm time is then displayed for 2 seconds), press it once more to turn it off. When the alarm is turned on, there is an alarm symbol in the upper part of the display.

Press and hold the [Alarm] button **(7)** for 3 seconds to set the alarm. The hours starts blinking and can be set with the [Minus] **(8)** and [Plus] **(10)** buttons. Press the [Alarm] button **(7)** once more to set the minutes.

Wake up light

30 minutes before the alarm, the wake up light will gradually turn on, starting at 10 % and gradually reaching 100 %. To turn off the light, press and hold the [Brightness] **(9)** button for 3 seconds. The alarm will play for 2 minutes. Press the [Snooze] **(5)** button to postpone the alarm by 5 minutes. Press any button except the [Snooze] **(5)** button to turn off the alarm.

Powered by batteries

If only powered by batteries, the light functions does not work. All other functions are working.

Sleep mode (only with power adapter)

The sleep mode will turn on the light 30 minutes before the set time and gradually dim it until it turns off completely.

Press the [Sleep mode] button **(11)** once to turn on the sleep mode (the sleep time is then displayed for 2 seconds), press it once more to turn it off. When the sleep mode is turned on, there is a symbol in the upper part of the display.

Press and hold the [Sleep mode] button **(11)** for 3 seconds to set the time for sleep. The hours starts blinking and the time can be set by pressing the [Minus] **(8)** and [Plus] **(10)** buttons. Press the [Sleep mode] button **(7)** once more to set the minutes.

FM radio

Press the [FM radio] button **(12)** to turn on the radio. Press and hold the button to start an automatic search for channels. Select the different channels by pressing the [Minus]

(8) and [Plus] **(10)** buttons. Increase the volume by pressing the [Volume +] button **(13)**, press the [Volume -] button **(14)** to decrease the volume.

If powered by batteries, the radio will turn off when the battery level is too low.

Volume

Increase the volume by pressing the [Volume] **(13)** button, press the [Volume -] button **(14)** to decrease the volume.

Troubleshooting

If the device doesn't work as it should, try to disconnect from the power supply for 10 seconds, then plug it back in.

Safety information

Read this safety information carefully in order to avoid personal and/or material damage. Study the instruction manual in its entirety before you install and start up the appliance. The manufacturer cannot be held responsible for an incorrect installation and/or non-intended usage.


This appliance is only intended for household use and may only be used indoors. Avoid dirty and/or dusty environments.

If the power cord or adapter is damaged, it must be replaced by a similar cord or adapter recommended by the manufacturer.

Protect and place the power cord so that it cannot be stepped upon or jammed in any way. The power cord must never touch wet or warm surfaces. Never put heavy objects or objects with sharp edges on the power cord.

Return used batteries to your local battery recycling. Always keep batteries away and out of reach from children! A swallowed battery can result in severe injuries and a deadly outcome. Contact your hospital at once if you suspect that a battery has been swallowed or has entered the body in any other way.

Do not look straight into the lamp for a long time. When stored for a longer period of time, remove the batteries and store the device in a dry environment.

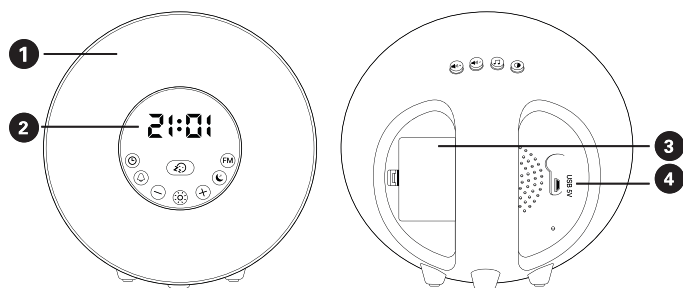

- | | | |
|-------------------|---------------|---------------------------|
| 1. LED-lampa | 7. Alarm | 12. FM-radio |
| 2. Display | 8. Minus | 13. Volym + |
| 3. Batterihållare | 9. Ljusstyrka | 14. Volym - |
| 4. Strömkontakt | 10. Plus | 15. Ljud |
| 5. Snooze | 11. Sov | 16. Displayens ljusstyrka |
| 6. Tid | | |

Specifikationer

Spänning:	230 V, 50/60 Hz
Batteri:	3x AAA (ej inkl.)
Ljuskategori:	Varmvit & flerfärgad
Dimensioner:	Ø170 x 110 mm
Vikt:	290 g
Funktioner:	Wake-up-light, FM-radio, Snooze

Inkluderat

- Wake-up-light
- Strömadapter (Micro-USB)
- Manual

Användning

Koppla till strömuttag

Sätt i den inkluderade strömadaptern i strömuttaget (4). Greppa alltid tag i strömadapterns strömkontakt när den kopplas från, dra inte i sladden.

Installera batterier

För att installera batterierna, lyft flärpen och öppna batteriluckan. Placera tre stycken AAA-batterier i batterihållaren (tänk på polariteten) och stäng locket. Ifall wake-up-lighten drivs av batterier fungerar inte ljusfunktionen, endast alarm och radio.

Ställ in tiden

Ställ in 12- eller 24-timmarsformat genom att trycka på [Tid]-knappen (6). Tryck och håll in [Tid]-knappen (6) för att ställa in timmarna och tryck sedan igen på [Tid]-knappen (6) för att ställa in minuterna. Använd [Minus]- och [Plus]-knapparna (8, 10) för att ställa in tiden.

Display

Tryck på [Display ljusstyrka]-knappen (16) för att välja ett av följande alternativ; display av, halv ljusstyrka, full ljusstyrka.

Vid batteridrift stängs displayen av automatiskt efter 10 sekunder, tryck ned valfri knapp (13-16) för att sätta på displayen igen.

LED-lampa

LED-lampan har tre olika alternativ, varmvitt, flerfärgad och av. Tryck ned [Ljusstyrka]-knappen (9) för att byta mellan dessa.

För det varmvita alternativet, använd [Minus]- och [Plus]-knapparna (8, 10) för att öka och minska ljusstyrkan. För det flerfärgade alternativet, använd [Minus]- och [Plus]-knapparna (8, 10) för att byta mellan färgerna. Ifall ingen knapp trycks ned så skiftar ljuset mellan alla färger.

Alarmljud

Välj önskat alarmljud genom att trycka på [Ljud]-knappen **(15)**. Växla mellan ljuden med [Minus]- och [Plus]-knapparna **(8, 10)**. Ljud 1-6 är olika naturljud och låtar, nummer 7 är den senaste spelade radiokanalen. Tryck på [Ljud]-knappen **(15)** igen för att bekräfta det valda alarmljudet.

Ställ in alarmet

Tryck på [Alarm]-knappen **(7)** för att aktivera alarmet (alarmtiden visas då under två sekunder på displayen), tryck ned knappen en gång till för att avaktivera det. När alarmet är aktiverat visas en alarmsymbol i den övre delen av displayen.

Tryck ned [Alarm]-knappen **(7)** i 3 sekunder för att ställa in alarmet. Timmarna börjar blinka och kan ställs in med [Minus]- och [Plus]-knapparna **(8, 10)**. Tryck ned [Alarm]-knappen **(7)** en till gång för att ställa in minuterna.

Wake-up-light

30 minuter före den inställda alarmtiden tänds wake-up-lighten gradvis, den börjar på 10 % och gradvis går den upp till 100 %. För att stänga av ljuset, tryck och håll ned [Ljusstyrka]-knappen **(9)** i 3 sekunder. Tryck på [Snooze]-knappen **(5)** för att skjuta upp alarmet i 5 minuter. Tryck på valfri knapp, förutom [Snooze]-knappen **(5)**, för att stänga av alarmet. Alarmet spelas i två minuter.

Sovläge (enbart med strömadapter)

Sovläget slår på ljuset 30 minuter före den inställda tiden och sedan sänks ljuset gradvis till det är helt avstängt. Tryck på [Sov]-knappen **(11)** en gång för att slå på sovläget (sovtiden visas då under två sekunder på displayen), tryck en gång till för att slå av den.

När sovläget är aktiverat lyser en symbol i den övre delen av displayen.

Tryck och håll ner [Sovläge]-knappen **(11)** i 3 sekunder för att sätta tiden för sovtiden.

Timmarna börjar blinka och tiden kan ställas in genom att trycka på [Minus]- och [Plus]-knapparna **(8, 10)**. Tryck en gång till på [Sovläge]-knappen **(7)** för att ställa in minuterna.

FM-radio

Tryck på [FM-radio] **(12)** för att slå på radion. Tryck och håll ned knappen för att starta en automatisk sökning av radiokanaler. Välj de olika kanalerna genom att trycka på [Minus]- och [Plus]-knapparna **(8, 10)**. Öka volymen genom att trycka på [Volym +]-knappen, tryck på [Volym -]-knappen för att sänka ljudet. Vid batteridrift stängs radion av när batteriet är lågt.

Volym

Öka volymen genom att trycka på [Volym +]-knappen, tryck på [Volym -]-knappen för att

sänka ljudet.

Batteridrift

Vid batteridrift fungerar inte ljusfunktionerna. Alla andra funktioner fungerar.

Felsökning

Ifall apparaten inte fungerar som den ska, prova att koppla ur nätadaptern i 10 sekunder och sedan koppla in den igen.

Säkerhetsföreskrifter

För att undvika person- och/eller sakskada ska denna säkerhetsinformation läsas noggrant och beaktas. Studera också hela användarmanualen innan du installerar och startar apparaten. Tillverkaren kan inte ta ansvar för felaktig inkoppling och/eller användning. Apparaten får bara användas inomhus. Undvik smutsiga och/eller dammiga miljöer. Om elkabeln skadats, måste den bytas ut till av tillverkaren rekommenderad motsvarande nätkabel. Skydda elkabeln så att den inte blir trampad på eller kommer i kläm. Anslutningskabeln får aldrig vidröra våta eller varma ytor. Ställ aldrig tunga föremål eller föremål med vassa kanter på kabeln.

Förbrukade batterier skall lämnas till din lokala batteriinsamling. Förvara alltid batterier utom räckhåll för barn! Om någon av misstag sväljer batteriet kan det orsaka allvarlig skada eller dödsfall. Om du misstänker att ett batteri har svalts eller kommit in i kroppen på annat vis, uppsök läkare omedelbart. Kolla inte direkt in i lampan under en längre tid.

Vid förvaring under en längre tid, ta ut batterierna och förvara apparaten i en torr miljö.

www.rubicson.com
Box 50435 Malmö
Sweden
2017-05-26

