

DISPOSAL/RECYCLING OF EMPTY

BalloonGaz®

Folat®




TANKS



WARNING: Follow these instructions for safe disposal of the non-refillable BalloonGaz® tank. Not following these instructions can result in an immediate release of helium gas can cause personal injury and/or property damage or both. BalloonGaz® is a non-refillable tank. Please do not refill!

Read all instructions for more information.

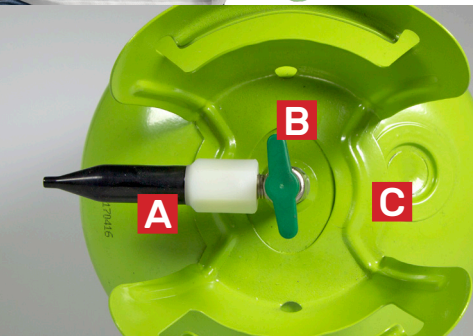

A. Tilt-Nozzle

B. Valve Handle

C. Burst Disk

1. Only attempt disposal when the BalloonGaz® tank is empty.

2. Take the tank to a well-ventilated area. Fully open the valve handle by turning it counter-clockwise. Press and hold down the nozzle until the tank is empty.

Listen and feel for pressure discharging from the nozzle. The tank is empty when no sound is heard or air pressure is felt at the opening.




3. Unscrew and remove the nozzle.

4. Take the tank to a recycling center or place with curbside recycling pickup. However, please note that recycling programs for this product may not exist in your area.

If your local recycling center will not accept the empty BalloonGaz® tank, please continue with these additional instructions.

5. Place the tip of a screwdriver on the center of the burst disc located on the top of the tank.

6. Tap the handle of the screwdriver with a hammer to punch a hole in the burst disc.

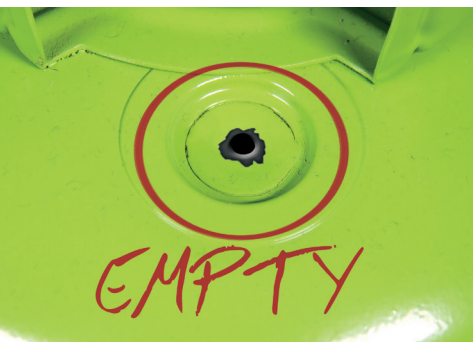

7. When there is a hole in the burst disc (see image), the helium cylinder is now recyclable at your local recycle centre or follow your local laws for disposing steel tanks.